


RCP2-1000

Remote Control Panel for Rack Mount SSPAs

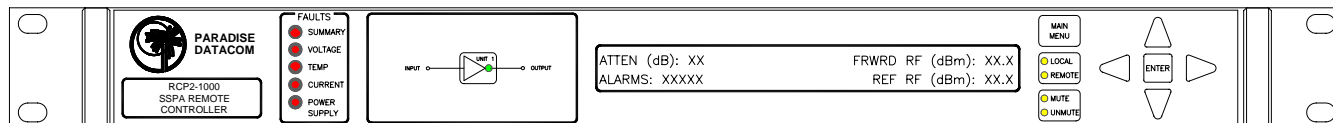

RCP2-1000 Remote Control Panel

DESCRIPTION

The Paradise Datacom Remote Control Panel (RCP2-1000-RM) was designed to provide easy remote monitor and control of Paradise Datacom's Rack Mount Solid State Power Amplifier.

Control of the RCP2-1000-RM can be handled through Front Panel operation, or remotely through Parallel or Serial communication to a remote computer.

The RCP2-1000-RM front panel includes ten LEDs that indicate the internal state of the Rack Mount SSPA. Five fault condition LEDs on left side of the front panel indicate the SSPA major faults plus a summary fault state.

A 2 line by 40 character LCD provides an extremely user friendly interface. Virtually all of the controller's setup and adjustments are accessible from the LCD.

Four navigation buttons and a separate Enter key allow the user to navigate the firmware menu on the LCD. Separate buttons have been provided for frequently used functions.

Common feed interfaces are offered as standard and isolation is provided at all RF interfaces.

A range of RF hardware options is offered to meet specific system requirements.

FEATURES

- Front panel or remote operation.
- Parallel and serial (RS232 / RS485) connections
- Flash firmware is field programmable
- 2 line x 40 character LCD
- Easy-to-navigate firmware menu structure
- 1 Rack Unit high

AT A GLANCE

The front panel displays the Mute and Online statuses of the Rack Mount SSPA, and allows monitoring of the following fault states:

- Summary
- Voltage
- Temperature
- Current
- Power Supply


RCP2-1000

Remote Control Panel

for Rack Mount SSPAs



RCP2-1000 FRONT PANEL DESCRIPTION

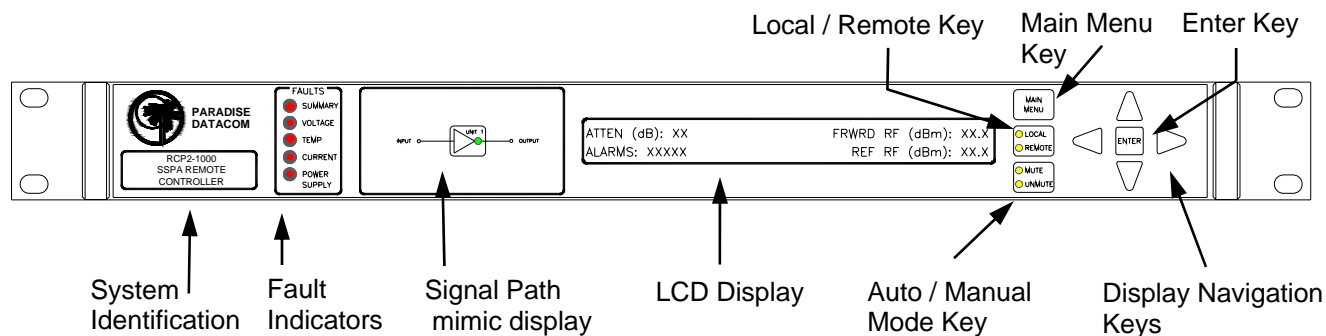

GENERAL SPECIFICATIONS

Characteristic	Specification
Configurations	RCP2-1000-RM; Remote Control Panel for RM SSPA
Serial Communications	RS-232 / RS-485 2-wire
Parallel I/O Status Outputs Control Inputs	Form C Relay Contacts (10 sets) Contact Closure to Ground
AC Input Power	85-265 VAC, 47-63 Hz, 1 A max, >0.93 power factor
Mechanical Dimensions	1.75 in. H x 19 in. W x 13.3 in. D [1 RU] 45 mm H x 483 mm W x 338 mm D
Weight	5 lb. (2.3 kg)
Environmental Temperature	0 - 50° C


RCP2-1000

Remote Control Panel

for Rack Mount SSPAs



Rear Panel Connectors and Pin Identification

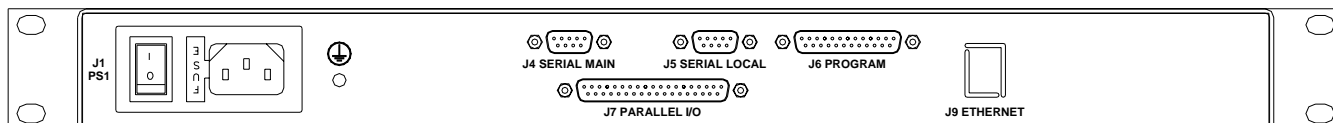

The RCP2-1000-RM includes two serial communications ports (J4 and J5). The Main Serial Port (J4) allows remote communication with a personal computer. The Local Serial Port (J5) allows a serial interface with a remote Rack Mount SSPA. Interface parameters are set by internal RCP hardware and cannot be reconfigured by user.

In addition, the RCP2-1000-RM features a 37-pin Parallel I/O port that contains a series of contact closures for monitoring remote SSPA faults as well as opto-isolated inputs for controlling some of the SSPA functions. Inputs react on the closure to ground.

The following tables show the pin outs for the Main Serial Port (J4), Local Serial Port (J5) and Parallel I/O Port (J7).

Main Serial Port (J4) Pin Outs

Pin	Function
1	RS485 TX+ (HPA Transmit +)
2	RS485 TX- (HPA Transmit -)/RS232 TX
3	RS485 RX+ (HPA Receive -)/RS 232 RX
4	RS485 RX- (HPA Receive +)
5	GND
6	Service Request 1 Form C relay NC contact (Closed on HPA Summary Fault)
7	Service Request Common Form C relay common contact
8	Service Request 2 Form C relay NO contact (Opened on HPA Summary Fault)
9	120 Ohm termination (must be connected to pin 4 in order to enable termination)

Local Serial Port (J5) Pin Outs

Pin	Function
1	RS485 RX+
2	RS485 RX-
3	RS485 TX-
4	RS485 TX+
5	GND
6,7,8	Not Used
9	120 Ohm termination (must be connected to pin 1 in order to enable termination)

RCP2-1000

Remote Control Panel

for Rack Mount SSPAs



J7, Parallel I/O Connector Pin-out

Pin #	Function / Description
1	Closed on Power Supply Fault Form C relay NC
2	Opened on Power Supply Fault Form C relay NO
20	Power Supply Fault Common
21	1. Standalone mode. Closed on Auxiliary Fault
	2. 1:1 Redundancy Mode. Closed on Automatic switchover mode. Form C relay NC
22	1. Standalone Mode. Opened on Auxiliary Fault
	2. 1:1 Redundancy Mode. Closed on Manual switchover mode. Form C relay NO
3	Auxiliary Fault\Auto-Manual Common
4	Closed on Mute. Form C Relay NC
5	Opened on Mute. Form C Relay NO
23	Mute Status Common
24	Closed on BUC Fault. Form C Relay NC
25	Opened on BUC Fault. Form C Relay NO
6	BUC Fault Common
7	Closed on High Temperature Fault. Form C Relay NC
8	Opened on High Temperature Fault. Form C Relay NO
26	High Temperature Fault Common
27	1. Standalone mode. Closed on Regulator Low Voltage Fault
	2. 1:1 Redundancy Mode. Closed on HPA Standby. Form C relay NC
28	1. Standalone Mode. Opened on Regulator Low Voltage Fault.
	2. 1:1 Redundancy Mode. Closed on HPA Online Mode. Form C relay NO
9	Regulator Low Voltage Fault\Standby-Online Common
10	Closed on DC Current Low Fault. Form C Relay NC
11	Opened on DC Current Low Fault. Form C Relay NO
29	DC Current Low Fault Common
30	Closed on Low Forward RF Fault. Form C Relay NC
31	Opened on Low Forward RF Form C Relay NO
12	Low Forward RF Fault Common
17	Mute/Unmute toggle input. 50mS Closure to ground to activate
35	HPA Standby input. 50mS Closure to ground to activate
36	Local/Remote toggle. 50mS Closure to ground to activate
37	Fault clear. 50mS Closure to ground to activate
19	Ground
34, 33, 32, 18, 16, 15, 14, 13	+5V Pull Up. 5mA Maximum output current